

ClearOne® **Aura**™
Quick-Start Guide



CHAT® 50
PERSONAL SPEAKERPHONE

CHAT 50 Personal Speakerphone

CONTACT INFORMATION

Headquarters

5225 Wiley Post Way
Suite 500
Salt Lake City, UT 84116
US: +1.801.975.7200
International: +1.801.975.7200

Aura Sales

US: +1.888.HEYAURA
International: +1.801.975.7200
aurasales@clearone.com

Aura Tech Support

US: +1.888.HEYAURA
International: +1.801.975.7200
auratechsupport@clearone.com



Caution: Read the Safety Information in the instruction manual.

U.S. PATENTS: D539,274; D556,189; D531,999.

OTHER PATENTS PENDING.

© 2021 ClearOne, Inc. All rights reserved.

Information in this document is subject to change without notice.

Document: QSG-0124-001v1.1 February 2021

Table of Contents

CONFIGURING THE CHAT 50	1
CONNECTING YOUR CHAT 50	1
CONNECTING THE CHAT 50 TO A PC.....	1
CONFIGURING AND TESTING YOUR CHAT 50	2
CHAT 50 AUDIO CONFIGURATION	2
USING THE CHAT 50	2
CHAT 50 LED INDICATORS	2
VOLUME & MUTE BUTTONS.....	2
CHAT 50 SPECIFICATIONS AND REQUIREMENTS	3
SYSTEM REQUIREMENTS.....	3
TECHNICAL SPECIFICATIONS	3
USB.....	3
LOUDSPEAKER.....	3
MICROPHONE(S).....	3
POWER.....	3

CHAT 50 Personal Speakerphone

CONFIGURING THE CHAT 50

The CHAT 50 can be used right out of the box and there's no software to download or install if it is to be used only with a PC.

CONNECTING YOUR CHAT 50

The following describes how to connect your CHAT 50 to a PC.

The CHAT 50 can also be connected to a number of other devices. For information on connecting the CHAT 150 to other devices, refer to the CHAT 50 User's Manual.

CONNECTING THE CHAT 50 TO A PC

Use the included USB 2.0 cable to connect the CHAT 50 to your PC (Figure 1).



Figure 1. Connecting to a PC

Important! CHAT devices are designed to work on flat, stable surfaces with no obstructions. For best results, do not hold or move the device while in use.

CONFIGURING AND TESTING YOUR CHAT 50

CHAT 50 AUDIO CONFIGURATION

The CHAT 50 derives its audio settings from the Windows sound settings if it is attached to a PC or through the 3rd party application's settings (COLLABORATE Space, Zoom, Microsoft Teams, Skype, etc.)

Consult the CHAT 50 User's Manual for advanced device configuration procedures if needed.

USING THE CHAT 50

CHAT 50 LED INDICATORS

The microphone LED indicator illuminates blue when the CHAT 50 microphone is active. The indicator illuminates red when the microphone is muted.

VOLUME & MUTE BUTTONS

Use the **Volume Up/Down** buttons (indicated by a large dot and a small dot) to adjust the volume level of the CHAT 50. Holding down either button will change the volume rapidly.

Use the **Mute** button to mute the CHAT 50's microphone until the **Mute** button is pressed again. If you are using the CHAT 50 with a PC, you can also use the Speaker Volume Control in Windows, as well as the CHAT 50 software to adjust the volume and mute the microphone.

CHAT 50 Personal Speakerphone

CHAT 50 SPECIFICATIONS AND REQUIREMENTS

SYSTEM REQUIREMENTS

Microsoft Windows 7 and above
MacOS X v10.10 "Yosemite" or later

Technical Specifications

USB

USB Connector: Type B

Loudspeaker

Bandwidth:
CHAT 50: 130 Hz – 20 kHz

Maximum Output Levels:
CHAT 50: 82 dB SPL @ 1 meter

Microphone(s)

Bandwidth: 100 Hz – 12 kHz

Power

USB-powered: 5 VDC @ 500 mA Maximum

Part Number

AUR-910-159-001 CHAT® 50 USB